

What Loom Driver do I need to run the loom?

The Comby serial interface is designed to run under the Macomber loom protocol. Several weaving software programs include the Macomber loom driver. The Comby Serial Interface has been extensively tested using Fiberworks PCW which is highly recommended. However it should perform satisfactorily with any program that has the Macomber loom driver.

A recent addition, which is included with the Comby Serial Interface, is WifWeave. WifWeave is a program that will run the Comby with the Serial Interface by using a WIF file. Most weaving software will allow you to save your design as a WIF file. You then open the WIF file in WifWeave to run the loom.

This means that if your weaving software does not have the Macomber loom driver, and if that weaving software can save your design as a WIF file, you can run the loom without having to purchase new weaving software (*saving big bucks!*).

Several very good weaving software programs (WeaveIt, PixeLoom and WeavePoint come to mind) do not have the Macomber driver. Just use the "save as Wif" or "export as WIF" and run the loom with WifWeave.